



<b>de</b>	Montageanleitung	<b>cs</b>	Montážní instrukce
<b>en</b>	Mounting instruction	<b>nl</b>	Montage-aanwijzing
<b>fr</b>	Instructions de montage	<b>no</b>	Montasje rettledning
<b>sv</b>	Monteringsinstruktion	<b>es</b>	Instrucciones de montaje
<b>it</b>	Istruzioni di montaggio	<b>da</b>	Monteringsvejledning
<b>fi</b>	Asennusohje	<b>ru</b>	Инструкция по установке
<b>zh</b>	安装指南	<b>ja</b>	インストールガイド

# POL8T1.4X/STD POL8T1.7X/STD POL8T1.8X/STD

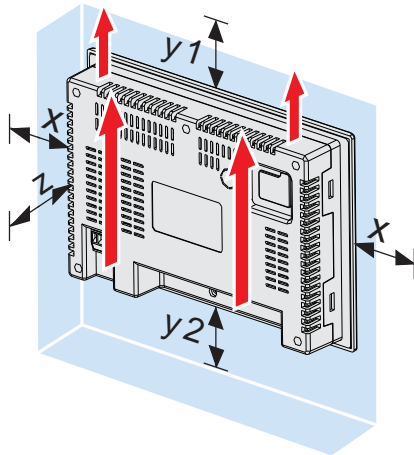


	x	y1	y2	z
POL8T1.4X/STD	10	10	75	25
POL8T1.7X/STD	10	10	50	20
POL8T1.8X/STD	10	10	50	20

<b>de</b>	Abstand (mm)
<b>en</b>	Clearances (mm)
<b>fr</b>	Dégagements
<b>sv</b>	Frigång
<b>it</b>	Spazi
<b>fi</b>	Vällykset
<b>zh</b>	设备间隙 (mm)
<b>cs</b>	Odbavení
<b>nl</b>	Spelingen
<b>no</b>	Klaringer
<b>es</b>	Espacios libres
<b>da</b>	Pladskrav
<b>ru</b>	Зазоры
<b>ja</b>	コントローラとコンピュータとの接続

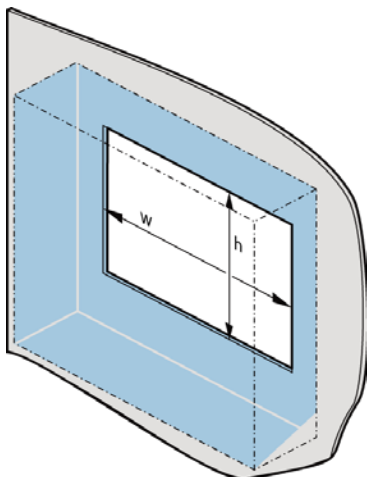


	w	h
POL8T1.4X/STD	163 mm	85 mm
POL8T1.7X/STD	210 mm	144 mm
POL8T1.8X/STD	330 mm	246 mm

<b>de</b>	Aussparung
<b>en</b>	Cut-out
<b>fr</b>	Découpe
<b>sv</b>	Utskäring
<b>it</b>	Cut-out
<b>fi</b>	Cut-out
<b>zh</b>	安装孔尺寸
<b>cs</b>	Cut-out
<b>nl</b>	Cut-out
<b>no</b>	Cut-størrelse
<b>es</b>	Del recorte
<b>da</b>	Cut-størrelse
<b>ru</b>	Вырез
<b>ja</b>	カットサイズ

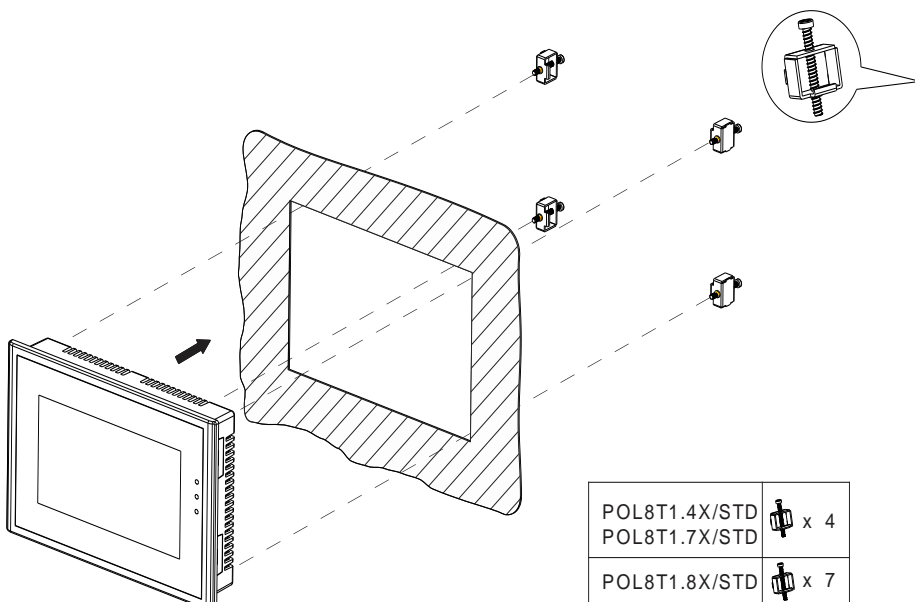


POL8T1.4X/STD	Φ x 4
POL8T1.7X/STD	Φ x 4
POL8T1.8X/STD	Φ x 7

<b>de</b>	Schaltschrankmontage
<b>en</b>	Panel mounting, peer to peer
<b>fr</b>	Montage du panneau
<b>sv</b>	Panelmontage
<b>it</b>	Montaggio a pannello
<b>fi</b>	Tauluasennus
<b>zh</b>	采用点对点, 面板安装
<b>cs</b>	Montážní panel
<b>nl</b>	Paneelmontage
<b>no</b>	Panelmontering
<b>es</b>	Montaje en panel
<b>da</b>	Panel montering
<b>ru</b>	Панель монтаж
<b>ja</b>	パネル取り付け

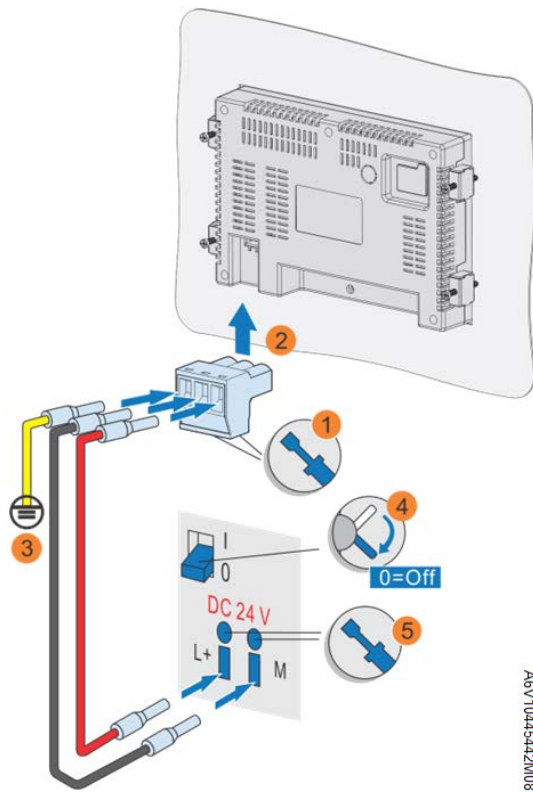


A6V10445442M08

de	Netzanschluss
en	Power connections
fr	Connexion d'alimentation
sv	Strömanslutning
it	Collegamento di potere
fi	Virtaliitäntä
zh	连接电源
cs	Připojení napájení
nl	Stroomverbinding
no	Strømtilkoblingen
es	Conexión de alimentación
da	Strømtilslutningen
ru	Подключение питания
ja	電源接続

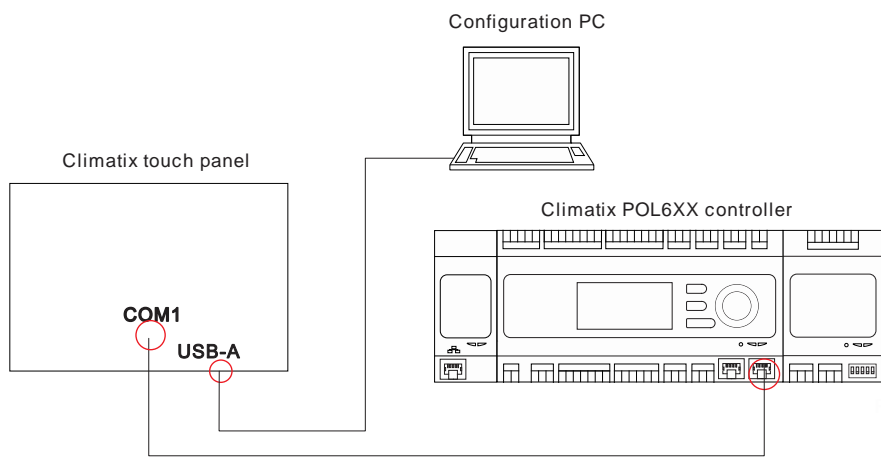

A6V10445447A01

de	Verbindungen zu Controller und PC
en	Connections with controllers and PC
fr	Les connexions avec les contrôleurs et PC
sv	Anslutningar med styrenheter och PC
it	Connessioni con controllori e PC
fi	Yhteyksiä säätimet ja PC
zh	连接控制器与电脑
cs	Spojení s řadiče a PC
nl	Verbindingen met controllers en PC
no	Tilkoblinger med kontrollere og PC
es	Conexiones con un controllers y PC
da	Tilslutninger med kontrollere og pc
ru	Связи с контроллерами и ПК
ja	コントローラと PC との接続

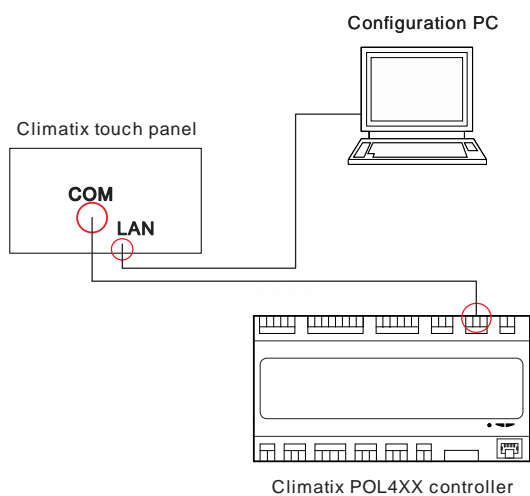

A6V10445447A02